

HL2819

Single, Dual, RGB or RGBW RF Remote Controls

POWER SUPPLY 3x AAA Batteries (Included)

OUTPUT RF Signal

FINISH Matte Black

DIMENSIONS 120 x 55 x 17mm



RF Remote Controls for use with HL1009 RF Receivers




AVAILABLE IN

| DESCRIPTION | CODE |
|--|-------------|
| Single Colour Remote Control & Bracket | HL2819SDIM |
| Dual Colour Remote Control & Bracket | HL2819SCCT |
| RGB and RGBW Remote Control & Bracket | HL2819SRGBW |

COMPATIBLE WITH

| DESCRIPTION | CODE |
|---------------------------------------|------------|
| HL1009 Series RF Receivers - Standard | HL1009FA |
| - Exterior | HL1009FAWP |

 Remotes can be paired to control multiple zones at the same time OR paired to control multiple zones independently.

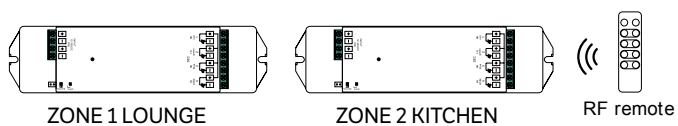

OPERATION NOTES

PAIRING RF REMOTE CONTROL/S WITH HL1009 RF RECEIVER

 
1. Wire HL1009 receiver correctly, power on.
2. Install batteries and turn on RF Remote, power status is indicated by red LED light at top of remote
3. Short press "Learning Key" button on HL1009 Receiver, if assigning the circuit to a zone then immediately press a zone number on RF Remote control or simply touch the colour wheel. If you are not assigning the circuit to a zone short press learning key and touch the colour wheel.
4. LED Lights will Blink to indicate they are successfully paired to your RF remote of choice.
5. You can pair up to 8 remote controls and wall controls to the same receiver.

RESETTING HL1009 RF RECEIVER & RF REMOTE CONTROL/S

1. Long press "Learning Key" button on HL1009 Receiver until LEDs blink on and off. This will reset the connection and cause the RF Receiver to "forget" all previous settings.

TROUBLESHOOTING


- Q. LED colours look very faded and dull on my RGBW Four Colour LED Tape?
- A. Turn off White channel. White Channel is operating at the same time as the 3 colour channels. Turn off fourth "White" Channel using "W" button on wall or remote control.
- Q. When I adjust the colours on my remote it does not match the colours being produced from my RGB LED?
- A. Channels wired incorrectly, double check all channels are wired correctly. e.g. Red into Red, Blue into Blue etc
- Q. Some of the colours are not working on my RGB tape?
- A. Check Polarity of connections, e.g. V+ = Positive, Red = Negative, Green = Negative, Blue = Negative




Wall Bracket Accessory

All remotes come complete with a low profile magnetised black wall bracket. Wall brackets come with fixing screw and double sided tape.

 HL2819SDIM *Single Colour Standard Remote Control*

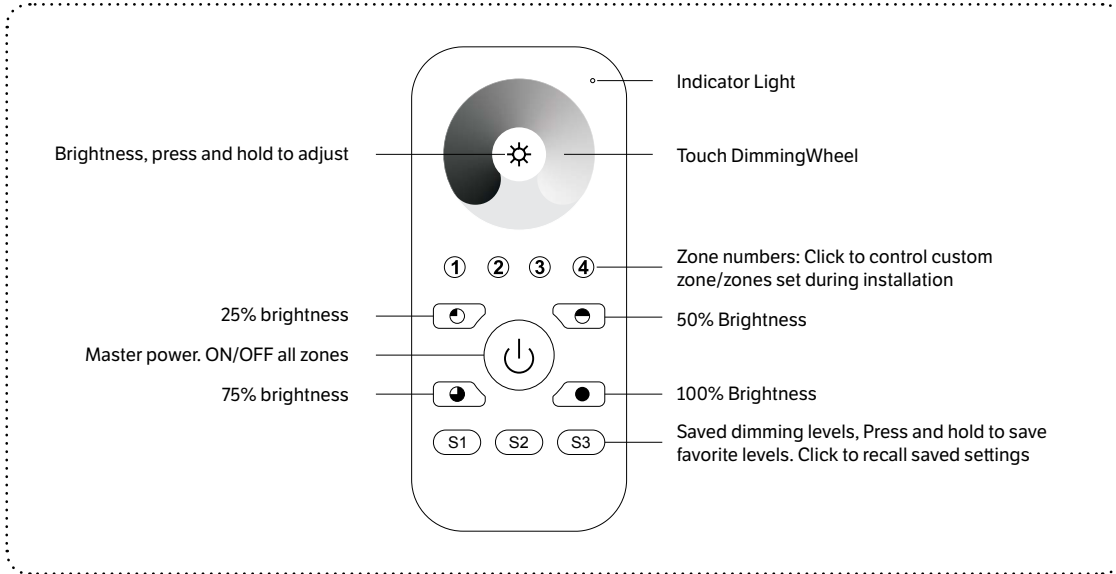

 HL2819SCCT *Dual Colour (Adjustable Colour temp) Remote Control*

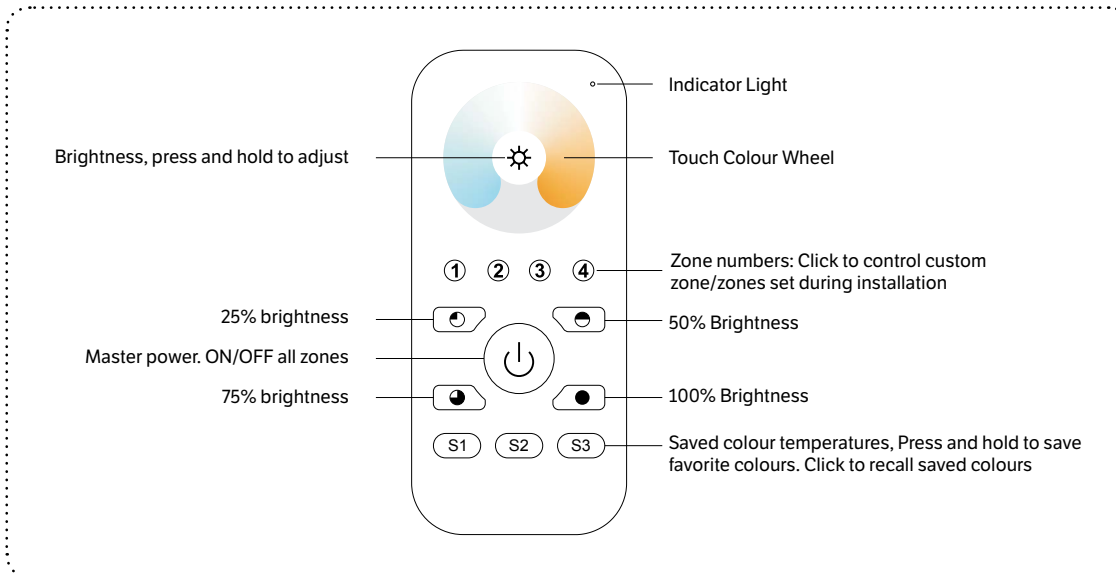

HL2819SRGBW *RGB & RGBW Remote Control*

