



Mounting	Switching	Product Code
Wall or Ceiling	Standard	FAN7183
	Timer	FAN7184
	Humidity Control	FAN7185

These axial fans are designed for easy installation, low running noise and efficient operation.

For best results, Simx recommend this product for bathrooms and kitchens.

In kitchen installations, do not install the fan, laterally, any closer than 2m from the cooktop.

In bathroom installations the fan can be installed within 1.5m, laterally, of the steam source and immediately above the bath or shower tray up to the higher of either 2.25m or the height of the fixed plumbing connection.

Once installed, following these instructions, this product will meet the Healthy Homes Standard for bathroom or kitchen installations in a rental property.

This product will also comply with the G4 Building Code for bathrooms and kitchens.


SPECIFICATIONS

Duct (mm)	Max. Fan Watts (W)	Max. Fan Pressure (Pa)	Free Air Fan Performance		Specific Fan Power (W/US)	Sound dB(A)	Operating Temperature (max.)	IP Rating
			(l/s)	(m ³ /hr)				
150	22	138	114	410	0.19	41	40°C	IPX4



E6337 Compliance: AS/NZS60335-2.80:2016

DIMENSIONS



WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF PROPERTY DAMAGE OR PERSONAL INJURY.

ALL ELECTRICAL WORK MUST BE CARRIED OUT BY A REGISTERED ELECTRICIAN IN ACCORDANCE WITH THE LATEST WIRING RULES AS/NZS3000.

CAUTION

- Before use, please check that the supply voltage and that of the appliance are the same (see product rating label).
- All wiring and wiring connections must comply with all current national wiring rules and regulations including AS/NZS3000:2018, or latest edition thereof.
- Any changes or modifications made or attempted to this product, without the prior written approval of the manufacturer, will void any and all stated warranties.
- This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are capable of, and have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Precautions must be taken to avoid the back flow of combustion gases from the open flue of gas or other fuel-burning appliances in the room, or from other rooms. These gases can potentially result in carbon monoxide poisoning. Open flued gas appliances should be tested by a competent person, after fan installation, to ensure that back flow of combustion gases does not occur.

WARNING

- Do not insert or allow foreign objects to enter any ventilation openings, as this may cause an electric shock, fire or damage to the fan.
- Do not put fingers or foreign objects into the grille while in operation.
- To prevent overheating of this fan, keep the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time to ensure it is clear of any dirt or dust accumulation. **DO NOT COVER.**
- Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- This product contains recyclable materials. Do not dispose of this product as unsorted council waste. Please contact your local council for the nearest collection point.

REGULATIONS AND STANDARDS

New Zealand Building Code and Healthy Homes

The following two category requirements have been established for mandatory extraction ventilation in New Zealand.

The New Zealand Building Code for New Building Consents

The building regulatory system sets out a framework to promote good quality decisions being made during the Building Consent process. The legislation and regulations work together, as the building regulatory system. The functional clauses of the NZ Building Code are grouped and described by a letter and number. Clause G of the NZ Building Code covers services, with G4 setting out the performance requirements for ventilation. The Building Code is enshrined in law. The New Zealand Building Code, G4, has been changed. This is supported by Acceptable Solution G4/AS1 Fourth Edition that specifies mechanical ventilation in accommodation units that contain cooktops, showers and baths.

Residential Tenancy Regulations to the Healthy Homes Standards


Residential Tenancy Regulations for rental properties only is changing to the Healthy Homes Standards, sub part 4 - Ventilation Standards.

Complying with the Acceptable Solution G4/AS1

To comply, the mandatory mechanical extract system must deliver minimum airflow rates for the complete installed ventilation system. This means that airflow rates must deliver the airflow after resistance of the ducting, internal and external grilles, as well as all other accessories, such as backdraught shutters, are included.

Fan selection is important as some types are far better at overcoming ducting system pressure drops.

Additionally, the quality of the ducting system installation can be all important. Rigid duct systems are best as they are the most efficient. Good installation practice is vital for flexible duct systems.

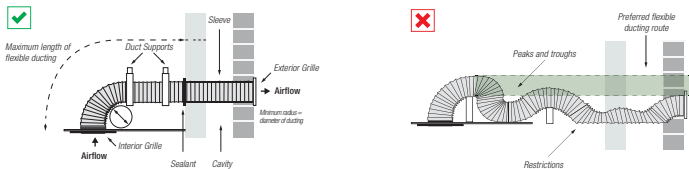

Choosing the Right Fan to Comply

Fans cannot be selected on the basis of free-air performance only. Fans must now be selected on the basis of the complete installed system performance for a designated room as per the table below.

Room	Airflow Rate (min.)	
	Intermittent	Continuous
Toilet ¹⁾	25 l/s	10 l/s
Bathroom/shower	25 l/s	10 l/s
Laundry ²⁾	40 l/s	-
Kitchen	50 l/s	12 l/s

1) Toilets only require ventilation if they have no openable windows

2) Simx recommends 40 l/s for laundries with unvented non-condensing tumble dryers as covered in AS 1668: Part 2 2012

Wall Fans and Through Wall Fan Kits

The following chart provides an easy fan selection guide for the range of Manrose Quiet fans and kits, to ensure compliance with the building code. An upgrade to the next available model is always recommended should more airflow be required.

Selection Reference Guide

Application	Duct	Wall Fans			Through Wall Fan Kits		
Toilet	150mm	FAN7183	FAN7184	FAN7185	FAN7190	FAN7191	FAN7192
	125mm	FAN7180	FAN7181	FAN7182	FAN7187	FAN7188	FAN7189
Bathroom	150mm	FAN7183	FAN7184	FAN7185	FAN7190	FAN7191	FAN7192
	125mm	FAN7180	FAN7181	FAN7182	FAN7187	FAN7188	FAN7189
Laundry	150mm	FAN7183	FAN7184	FAN7185	FAN7190	FAN7191	FAN7192
Kitchen	150mm	FAN7183	FAN7184	FAN7185	FAN7190	FAN7191	FAN7192

Installation Instructions

Specifications are subject to change without notice

enquiry@manrose.co.nz | www.manrose.co.nz



EXTRACTION FAN INSTALLATION AND ELECTRICAL CONNECTION MUST BE CARRIED OUT BY A REGISTERED ELECTRICIAN IN ACCORDANCE WITH THE LATEST WIRING RULES AS/NZS3000.



INSTALLATION

1. In a kitchen installation, do not install the fan any closer, laterally, than 2m from the cooktop. Visit the Manrose website for fan kit options best suited for lateral kitchen installations within 2m of a cooktop.
2. In a bathroom installation, the fan can be installed within 1.5m, laterally, of the steam source and immediately above the bath or shower tray up to the higher of either 2.25m or the height of the fixed plumbing connection.
3. Cut a 140mm diameter hole through the wall. We recommend the use of semi-rigid ducting which should be installed sloping slightly downwards away from the fan. Cut to length and tape both ends into position flush with the wall faces. Push the two clips on the bottom of the fan and pull the grille away from the chassis.
4. Using the built in spirit level bubble as an aid, mark the screw centres through the holes in the fan back plate. Drill, plug and screw into position. Fix an exterior grille into position with the louvres angled downwards.

NOTE: The grille must be fitted to comply with the standard requirements to prevent access to the fan's impeller. The wall kit used in this installation should provide a minimum ducting length of 100mm from the fans back plate to the inside of the external grille.

5. After installation, ensure impeller rotates freely and the shutters can open.
6. Replace the grille and ensure the clips are engaged.

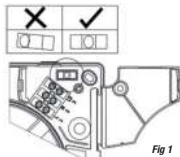


Fig 1

Open up the internal cover to access the spirit level bubble and terminals

IMPORTANT

- The fan should only be used in conjunction with fixed wiring.
- The cross-sectional area of supply cord used should be ranged from 1 - 1.5mm² with the appropriate sized protection device.
- Cable entry can only be made from the rear of the fan.
- The fan is suitable for connection to 220-240V AC 50Hz supply.
- The fan is a Class II double insulated product and **MUST NOT** be earthed.
- Check all connections have been made correctly and securely fastened.
- Ensure the impeller rotates and is free of any obstructions.



EXTRACTION FAN AND ANCILLARY CONTROL EQUIPMENT MUST BE ISOLATED FROM THE POWER SUPPLY DURING INSTALLATION OR MAINTENANCE



MAINTENANCE

1. At regular intervals following installation, the fan should be inspected and cleaned to ensure there is no build up of dirt or other deposits.
2. The fascia can be cleaned without removal by wiping the inlets and front face with a damp cloth.
3. The fan has sealed for life bearings, which do not require lubrication.

DISPOSAL

This product should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

PRIMARY FAN KIT SWITCHING OPTIONS

Standard Switching

The single speed fan is switched ON/OFF via an existing, or new, light, or auto sensor, switch (switch not supplied) (Fig 2).




Fig 2

Timer Switching

The single speed fan with timer switching is switched ON/OFF via an existing lighting circuit switch (Fig 3). Before adjusting the timer, the mains supply must be switched OFF. When switched ON, the fan will operate at full speed and will continue to run at that speed, for a pre-set time, after the fan is switched OFF.




Fig 3

The fan can be changed from timer to standard switching (Fig 4).

1. Remove the fan grille. The controller is factory set to 15 minutes approx. The overrun time period can be adjusted from 1-30 minutes by altering the adjuster on the control PCB. Note the exact min/max time may vary between products.
2. To REDUCE operating time, use a small screwdriver to turn the adjuster (Fig 5) ANTI-CLOCKWISE.
3. To INCREASE operating time, use a small screwdriver to turn the adjuster (Fig 5) CLOCKWISE.
4. Replace the fan grille.




Fig 4

Humidity Control Switching

Humidity control switching is enabled when either an existing, or new, fan switch (switch not supplied), is switched ON (Fig 5).

An integral humidity controller automatically switches the fan ON when it senses a significant rapid rise in humidity that may have been triggered by a shower/bath event. The fan will stop immediately if the event is not confirmed. However, if the event is confirmed, then either the preset top speed, or a lower speed, will be determined as the better option for clearing the humidity created by the shower/bath event and the fan will ramp up to, and run at, that speed. After sensing that the shower/bath event has ended, the fan will continue running for a period of time, as sensed by the humidity controller, as needed to clear the room of any residual humidity.




Fig 5

1. Remove the fan grille. The top fan speed can be set to one of four speeds by altering the fan speed adjuster on the control PCB. Note the exact speed set points may vary between products.
2. To REDUCE the speed, use a small screwdriver to turn the adjuster (Fig 7) ANTI-CLOCKWISE.
3. To INCREASE the speed, use a small screwdriver to turn the adjuster (Fig 7) CLOCKWISE.
4. Replace the fan grille.




Fig 6

ALTERNATIVE HUMIDITY CONTROL FAN KIT SWITCHING OPTIONS

with blue LED indicator light when switched ON (Fig 9)

Comfort Mode

By changing the wiring connections (Fig 8) the fan can be operated as a single speed fan switched ON/OFF via an existing, or new, fan switch (switch not supplied).

When comfort mode is switched ON, the humidity control option is disabled and the fan will not run during a shower/bath event until after comfort mode is switched OFF. The fan will then start, and run, at the preset top speed, for the same duration that the humidity control option was disabled, to clear any residual humidity. If, however, comfort mode has not been switched OFF after 20 minutes, the fan will automatically start, and run, at the preset top speed for 20 minutes before switching itself OFF. The jumper JP1 run-on timer (Fig 7) can be set to allow the fan to continue running, at the preset top speed, for a further 15 minutes if required.

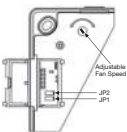


Fig 7

Fan Switch

For the fan switch option to be enabled, jumper JP2 (Fig 7) must be removed. Switched ON, the fan will run at the preset top speed. When switched OFF, the jumper JP1 run-on timer (Fig 7) can be set to allow the fan to continue running, at the preset top speed, for a further 15 minutes.




Fig 8

Pull Cord Switch

Activated by the pull cord, the fan will operate at the preset top speed for 15 minutes before switching itself OFF. The fan can stop running earlier by pulling the pull cord a second time.

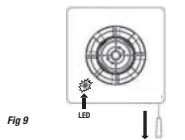


Fig 9

Installation Instructions

enquiry@manrose.co.nz | www.manrose.co.nz

Specifications are subject to change without notice

Simx Warranty Information

In this warranty:

We means Simx;

You means the consumer of the Goods

Supplier means the authorised distributor or retailer that sold you the Goods in New Zealand or Australia; and

Goods means the Simx product accompanied by this warranty and purchased in New Zealand or Australia.

The benefits provided to you under the following warranty are in addition to any other rights and remedies available to you under the law:

1. If, during the time from the date of purchase (Warranty Period), there is a defect in the Goods due to improper workmanship or material, we will replace or repair the Goods without charge. Any replacement product is warranted only for the time remaining on the original Warranty Period.
2. We are not obliged to replace or repair the Goods under clause 1 if the Goods have been improperly stored, installed, connected, used, operated, repaired, damaged, abused, tampered with, altered (without our written approval), or not maintained in accordance with our recommended installation, connection and operating instructions.
3. We exclude liability for:
 - a) consequential loss or any other loss or damage caused to property or persons arising from any cause whatsoever;
 - b) damage to consumable items such as lamps and starters; and
 - c) damage arising from normal wear and tear.
4. In order to claim under this warranty you must, within the Warranty Period, return the Goods to the Supplier, together with the original proof of purchase including the details below:

Supplier Name _____

Date of Purchase _____

Model Number _____

Invoice/Receipt No. _____

5. This warranty does not cover the cost of claiming under the warranty or transporting the Goods to and from the Supplier.

Our Goods come with guarantees that cannot be excluded under the New Zealand and Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the Goods fail to be of acceptable quality and the failure does not amount to a major failure.

To speak to someone about your Simx product or claiming under this warranty, please contact:

Simx Ltd New Zealand

p: +64 9 259 1660 f: +64 9 259 1661

www.simx.co.nz